

Visi-Therm[®] Deluxe

Submersible Aquarium Heater



Owner Information and Warranty

"Click Set" Temp Select Dial

Waterproof Double Insulation

Double-Suction Mounting Bracket

Three-Position Viewing Windows

High-Visibility Temperature Setting

On/Off Indicator Light

Double-Strength Glass Component Housing

Insulated Heating Elements

WARNING: Never operate your Visi-Therm Deluxe outside the filled aquarium for any reason.

Be sure to unplug or switch off all aquarium appliances before performing maintenance of any kind.

For additional assistance or information, call Marineland Customer Service at (800) 322-1266 M-F, between the hours of 8am and 5pm (Pacific Time).

 **MARINELAND**

For the life of your fish

IMPORTANT SAFEGUARDS

WARNING: To guard against injury, basic safety precautions should be observed, including the following.

READ AND FOLLOW ALL SAFETY INSTRUCTIONS


DANGER - To avoid possible electric shock, special care should be taken in the use of aquarium equipment. For each of the following situations, do not attempt repairs yourself. Return the appliance to an authorized service facility for service or discard the appliance.

1. A. If the appliance shows any sign of abnormal water leakage, immediately unplug it from the power source.
B. Carefully examine the appliance after installation. It should not be plugged in if there is water on parts not intended to be wet.

C. Do not operate any appliance if it has a damaged cord or plug, or if it is malfunctioning or if it is dropped or damaged in any manner.

D. To avoid the possibility of the appliance plug or receptacle getting wet, position aquarium stand and tank to one side of a wall mounted receptacle to prevent water from dripping onto the receptacle or plug. A "drip loop," shown in the figure at right, should be arranged by the user for each cord connecting an aquarium appliance to a receptacle. The "drip loop" is that part of the cord below the level of the receptacle or the connector, if an extension cord is used, to prevent water from traveling along the cord and coming in contact with the receptacle. If the plug or receptacle does get wet, **DON'T** unplug the cord. Disconnect the fuse or circuit breaker that supplies power to the appliance. Then unplug and examine for presence of water in the receptacle.

2. Close supervision is necessary when any appliance is used by or near children.
3. To avoid injury, do not contact moving parts or hot parts such as heaters, reflectors, lamp bulbs, etc.
4. Always unplug an appliance from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank cord to pull plug from outlet. Grasp the plug and pull to disconnect.
5. Do not use an appliance for other than intended use.

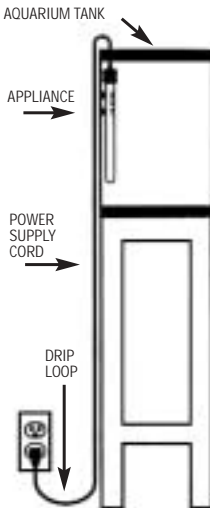

The use of attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.

6. Do not install or store the appliance where it will be exposed to the weather or to temperatures below freezing.
7. Make sure an appliance mounted on a tank is securely installed before operating it.
8. Read and observe all the important notices on the appliance.
9. If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.

SAVE THESE INSTRUCTIONS

LIMITED LIFETIME WARRANTY

This warranty covers length of ownership beginning on date of purchase. It is not assignable or transferable to any subsequent purchaser or user. At any time from the date of original purchase, Marineland Aquarium Products will repair or replace, at its option, any Visi-Therm Deluxe Aquarium Heater which is deemed defective in workmanship or materials. Please return the unit postage paid, together with cash register receipt, to:

MARINELAND AQUARIUM PRODUCTS

6100 Condor Drive, Moorpark, CA 93021

NOTE: Be certain to wrap heater carefully for protection during shipment. Consumer will bear cost of shipping following completion of service. If the problem is not covered under the terms and conditions of this warranty, the consumer will be notified and given an estimate of repair charges (with all shipping charges billed to consumer). If the estimate is refused, the product will be returned freight collect.

Damage, glass breakage or injuries resulting from negligence or misuse are not covered by this warranty. Loss of fish, personal injury, property loss or damage arising from use of this heater are not covered by this warranty. Incidental or consequential damages are specifically excluded*. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

**Because some states do not allow the exclusion of incidental or consequential damages, this exclusion may not apply to you.*

ADDITIONAL SAFETY CONSIDERATIONS

Never disassemble, tamper with, or try to repair your heater.

Never touch the Component Housing when heater is in operation.

Always keep cords dry and outside of the aquarium.

Always maintain the indicated minimum water level.

Always disconnect the heater before performing water changes.

Always allow your Visi-Therm Deluxe to cool for at least 15 minutes after unplugging and before removal from water.

DIRECTIONS

IMPORTANT: Do not plug in heater until instructed.

1. Attach the suction cups (included) to the Double-Suction Mounting Bracket. Slide bracket over heater to position indicated.

2. Place heater in aquarium by firmly pressing suction ends against wall surface. The Three-Position Viewing Window allows you to view the temperature setting from three possible angles - simply turn the heater until it locks into the best viewing position.

NOTE: Choose an algae-free location with adequate circulation. This ensures even heat distribution and optimum operation. No part of the heater housing should contact aquarium gravel, rocks or decorations.

3. Wait at least 15 minutes before plugging in your heater. The on/off indicator light will confirm that the power is on.
NOTE: Before plugging in heater, create a "drip loop" to prevent water from reaching receptacle.

4. Select the desired temperature. Turn the "Click Set" Temp Select Dial until the point of the red line on the thermometer scale reaches the correct setting.



**Aquarium
Systems**

Distributed by
Aquarium Systems, Inc.
A Marineland Company.